


Branchements semoir DS 200 - 500

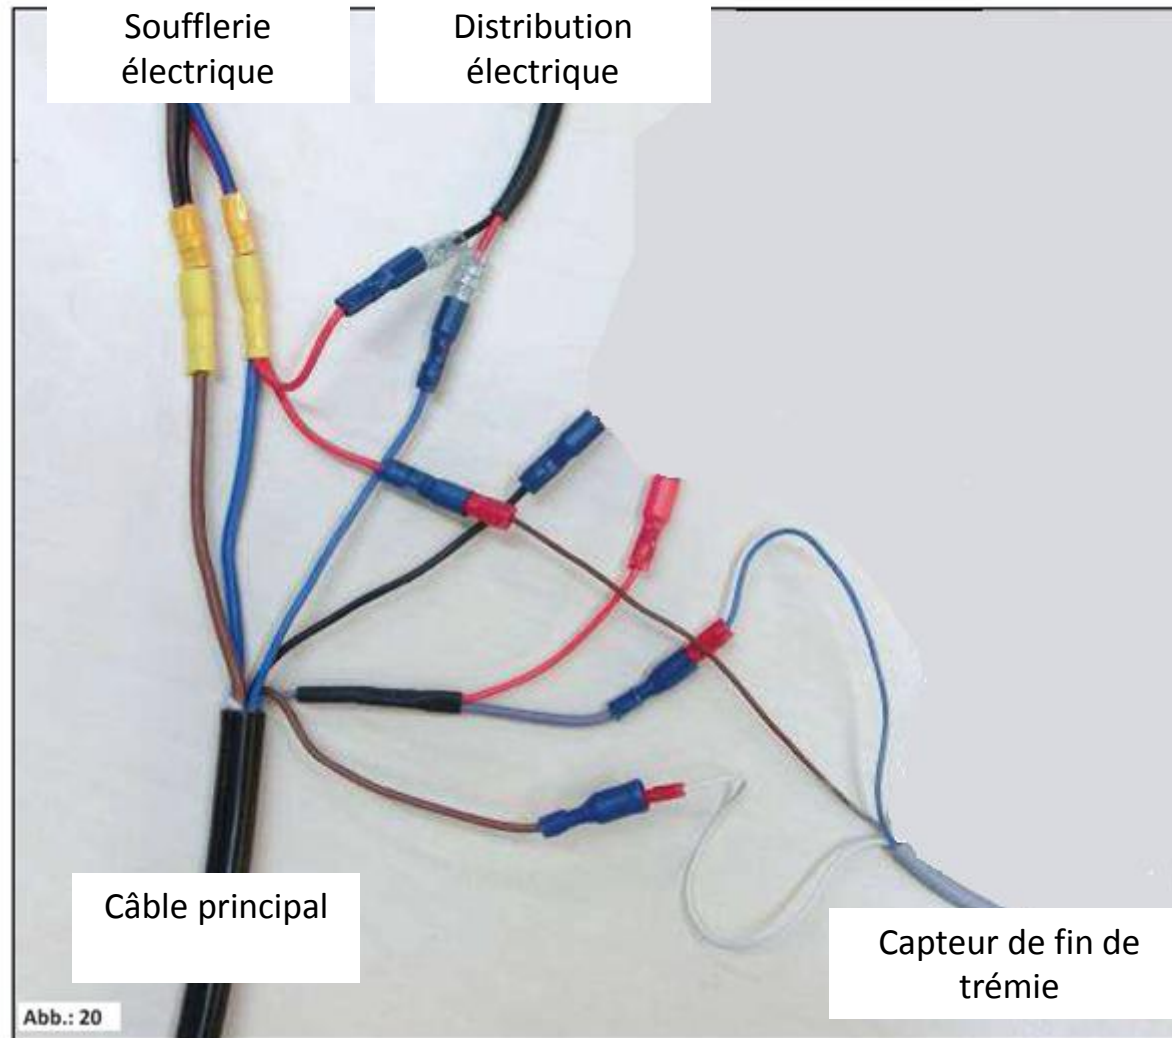




DS 200

DS 500



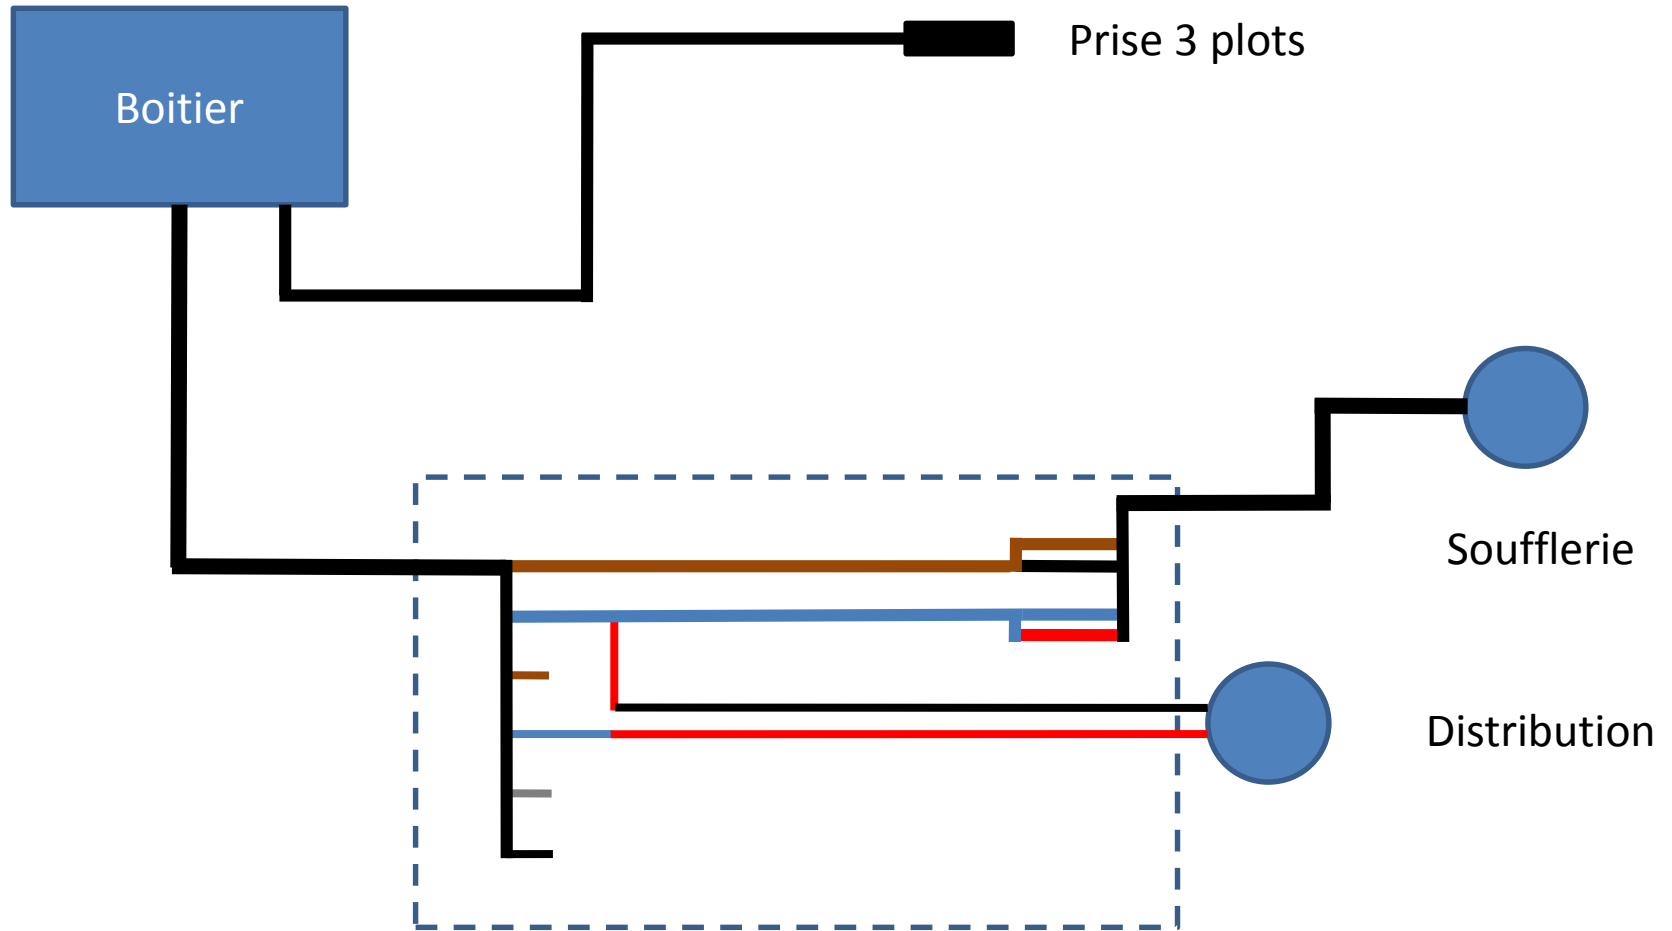


DS 200

DS 500




DS 200

DS 500

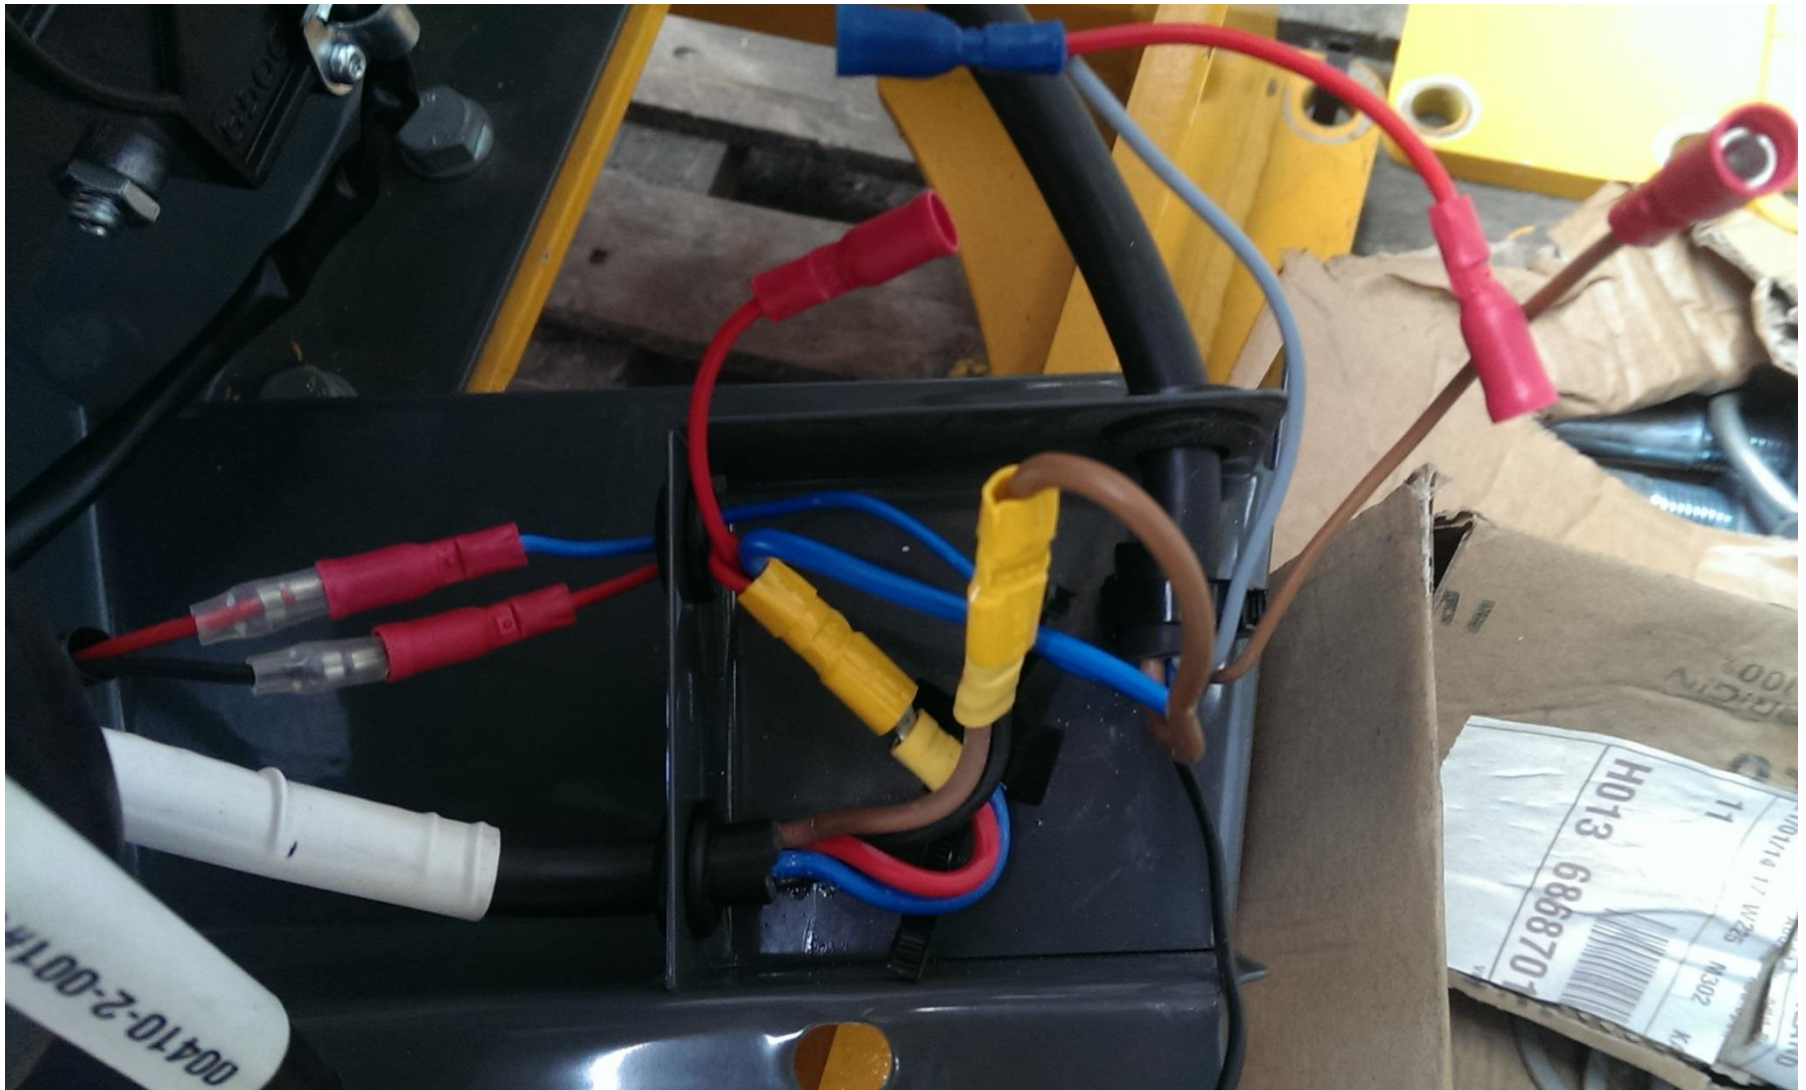

DS 200

DS 500

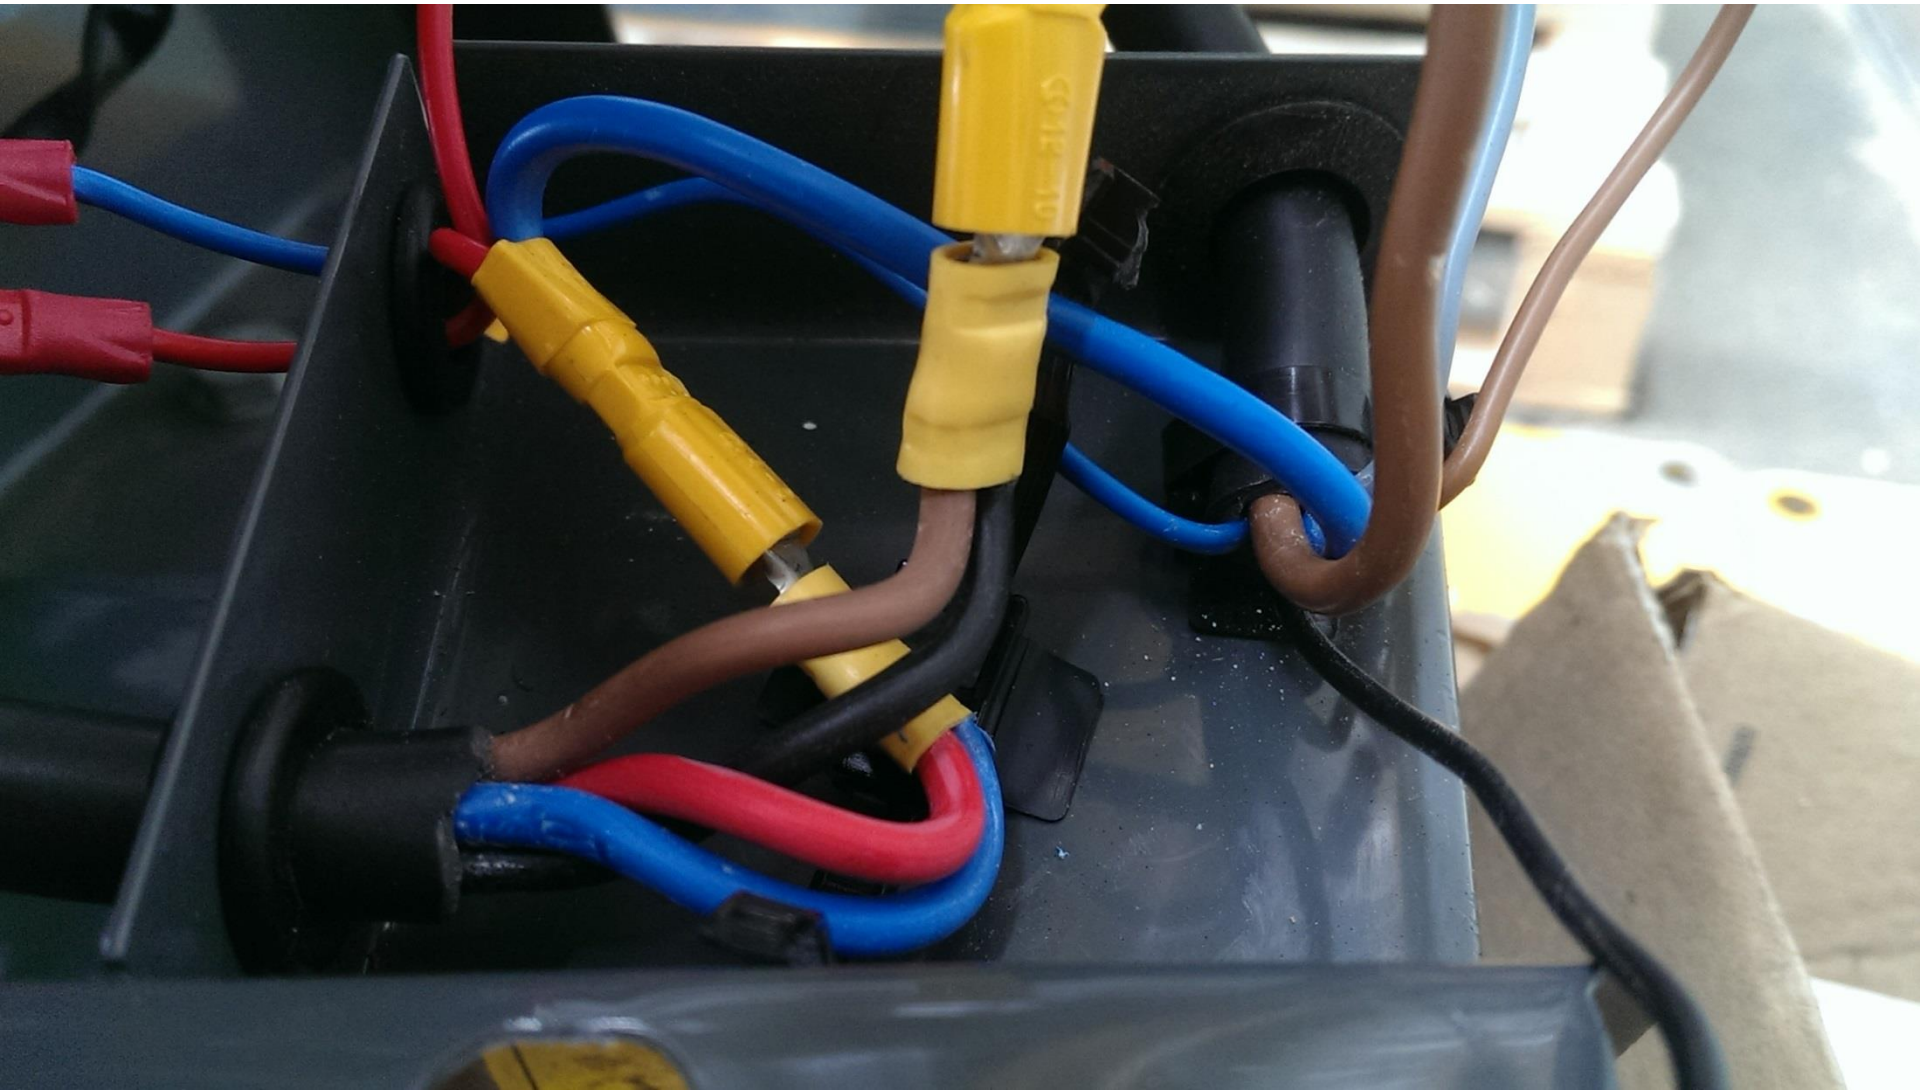

Branchement du ventilateur




DS 200

DS 500




DS 200

DS 500

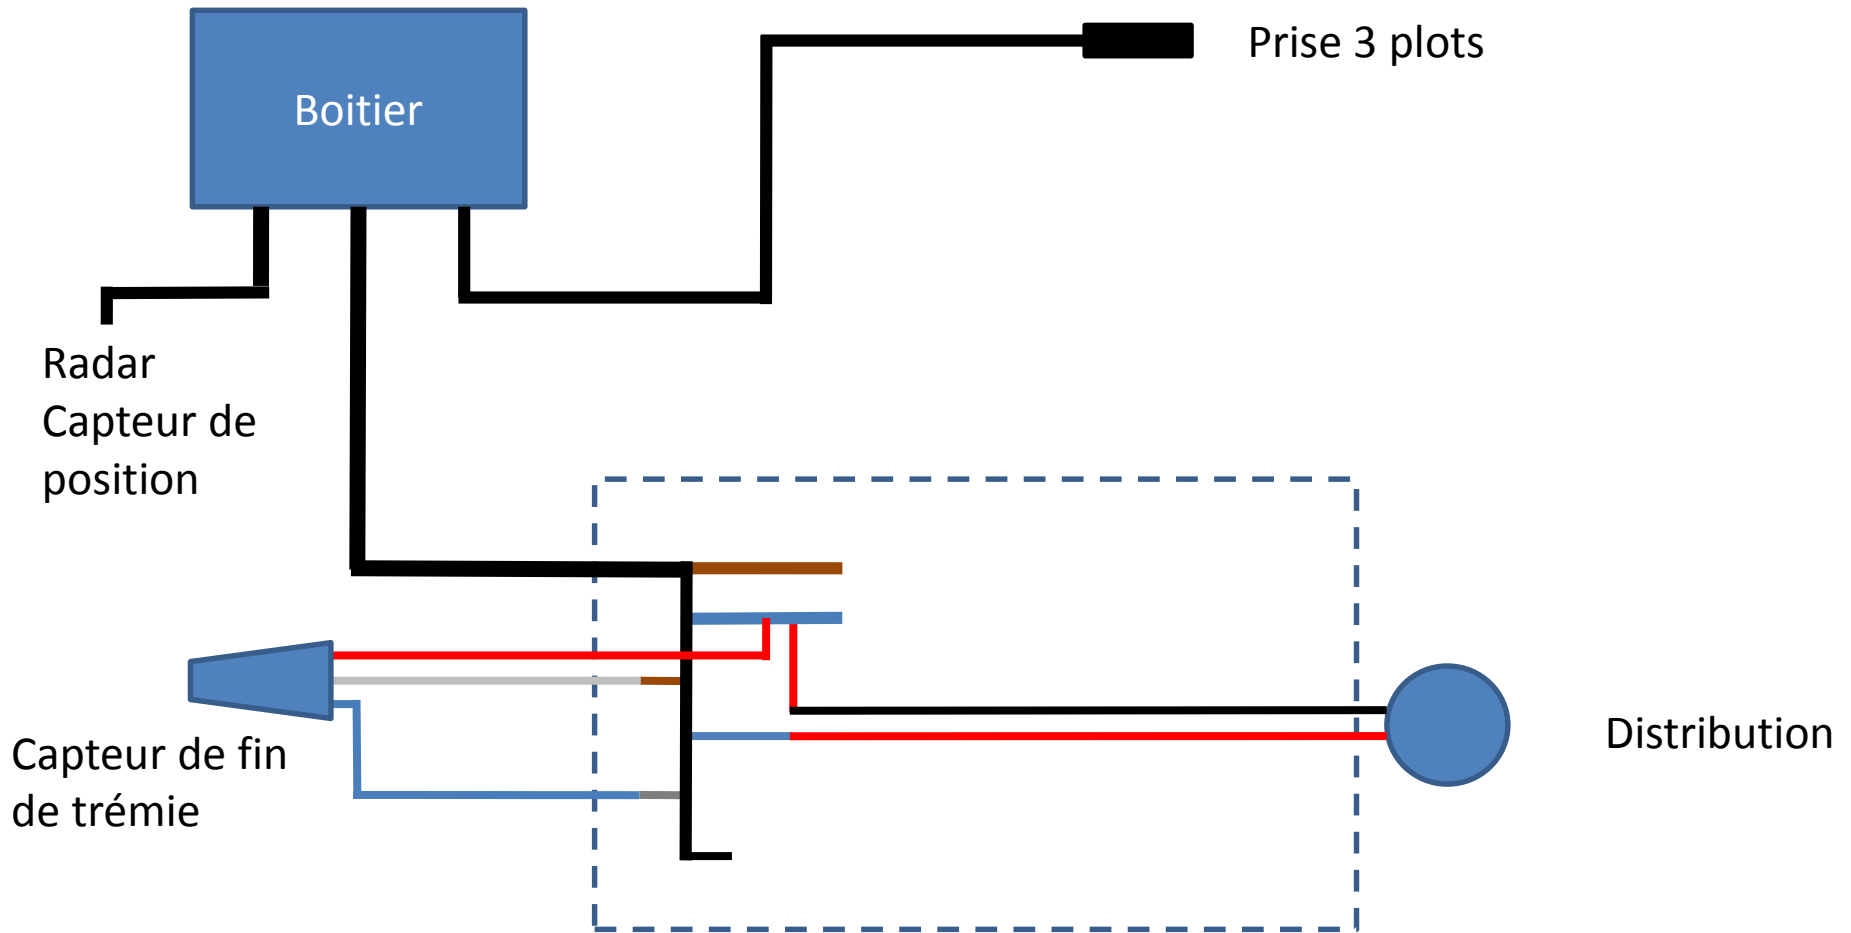


DS 200

DS 500

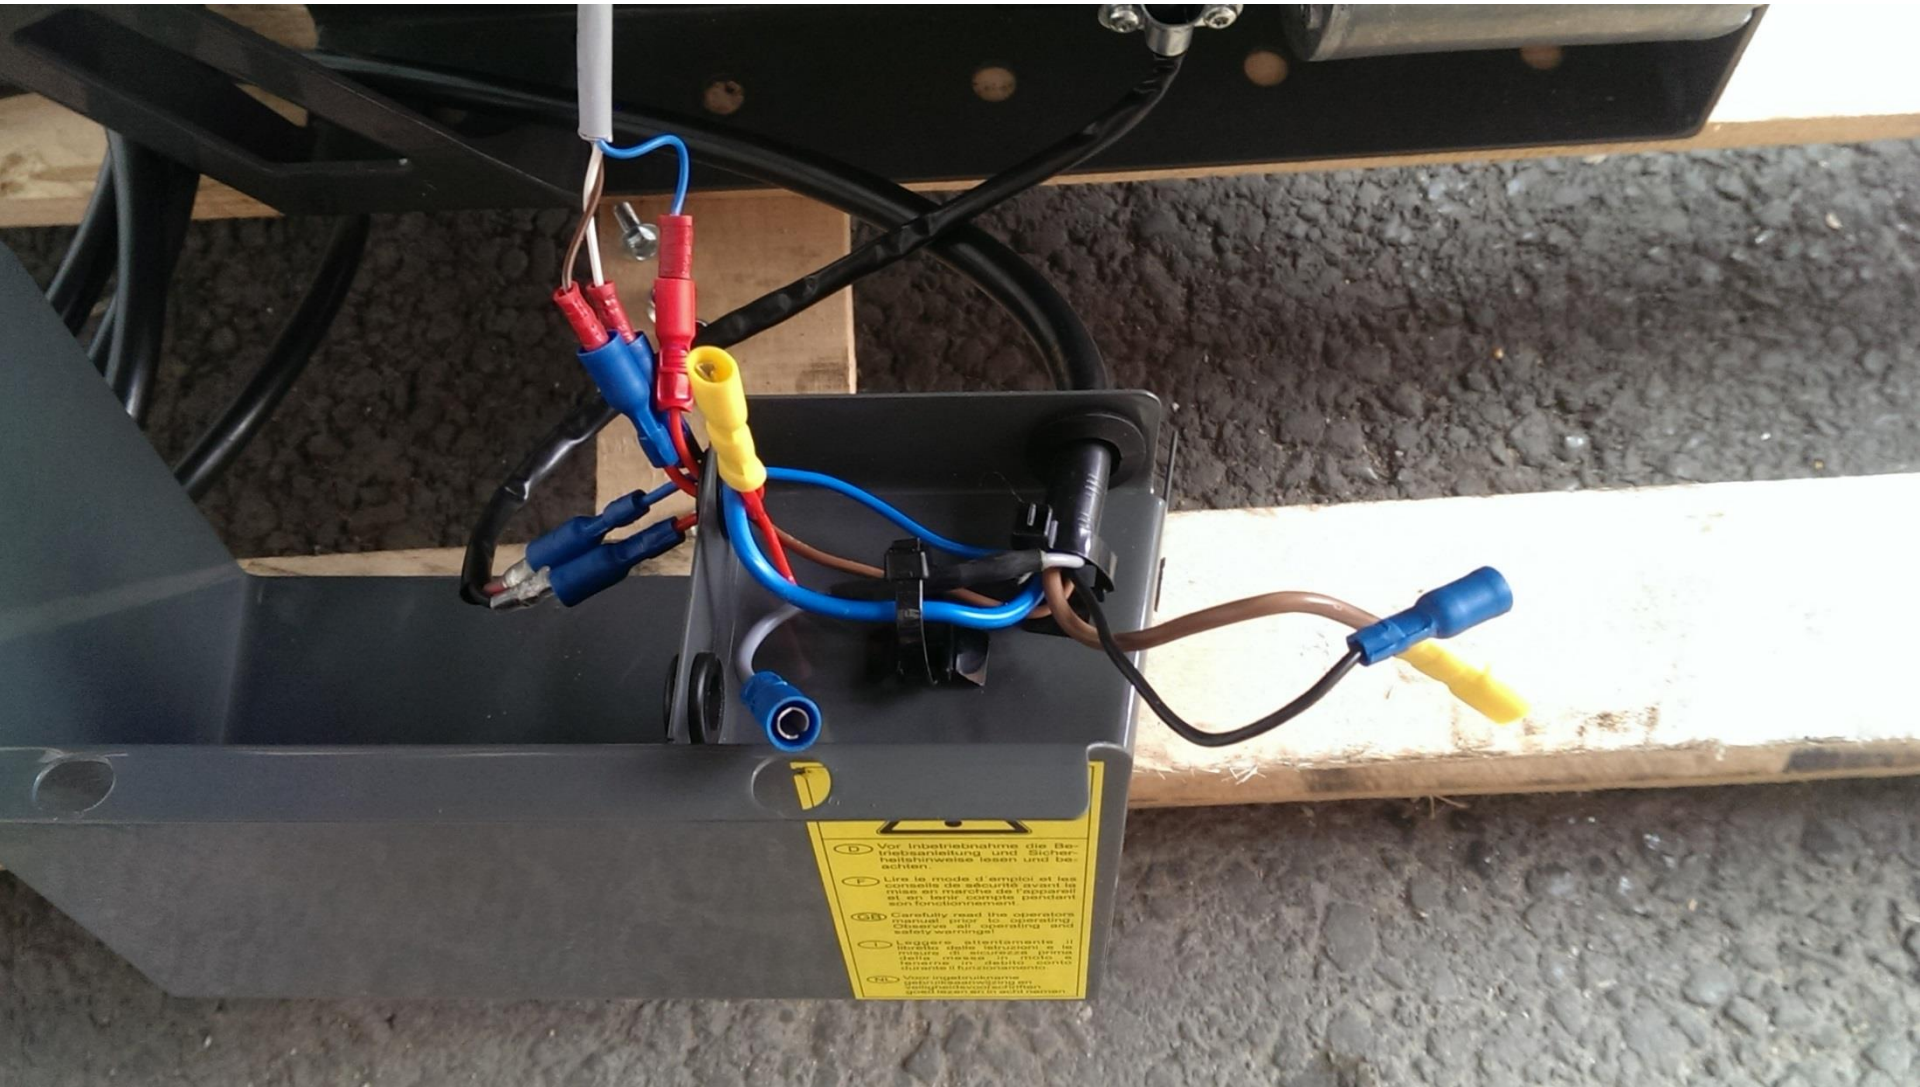

DS 200

DS 500

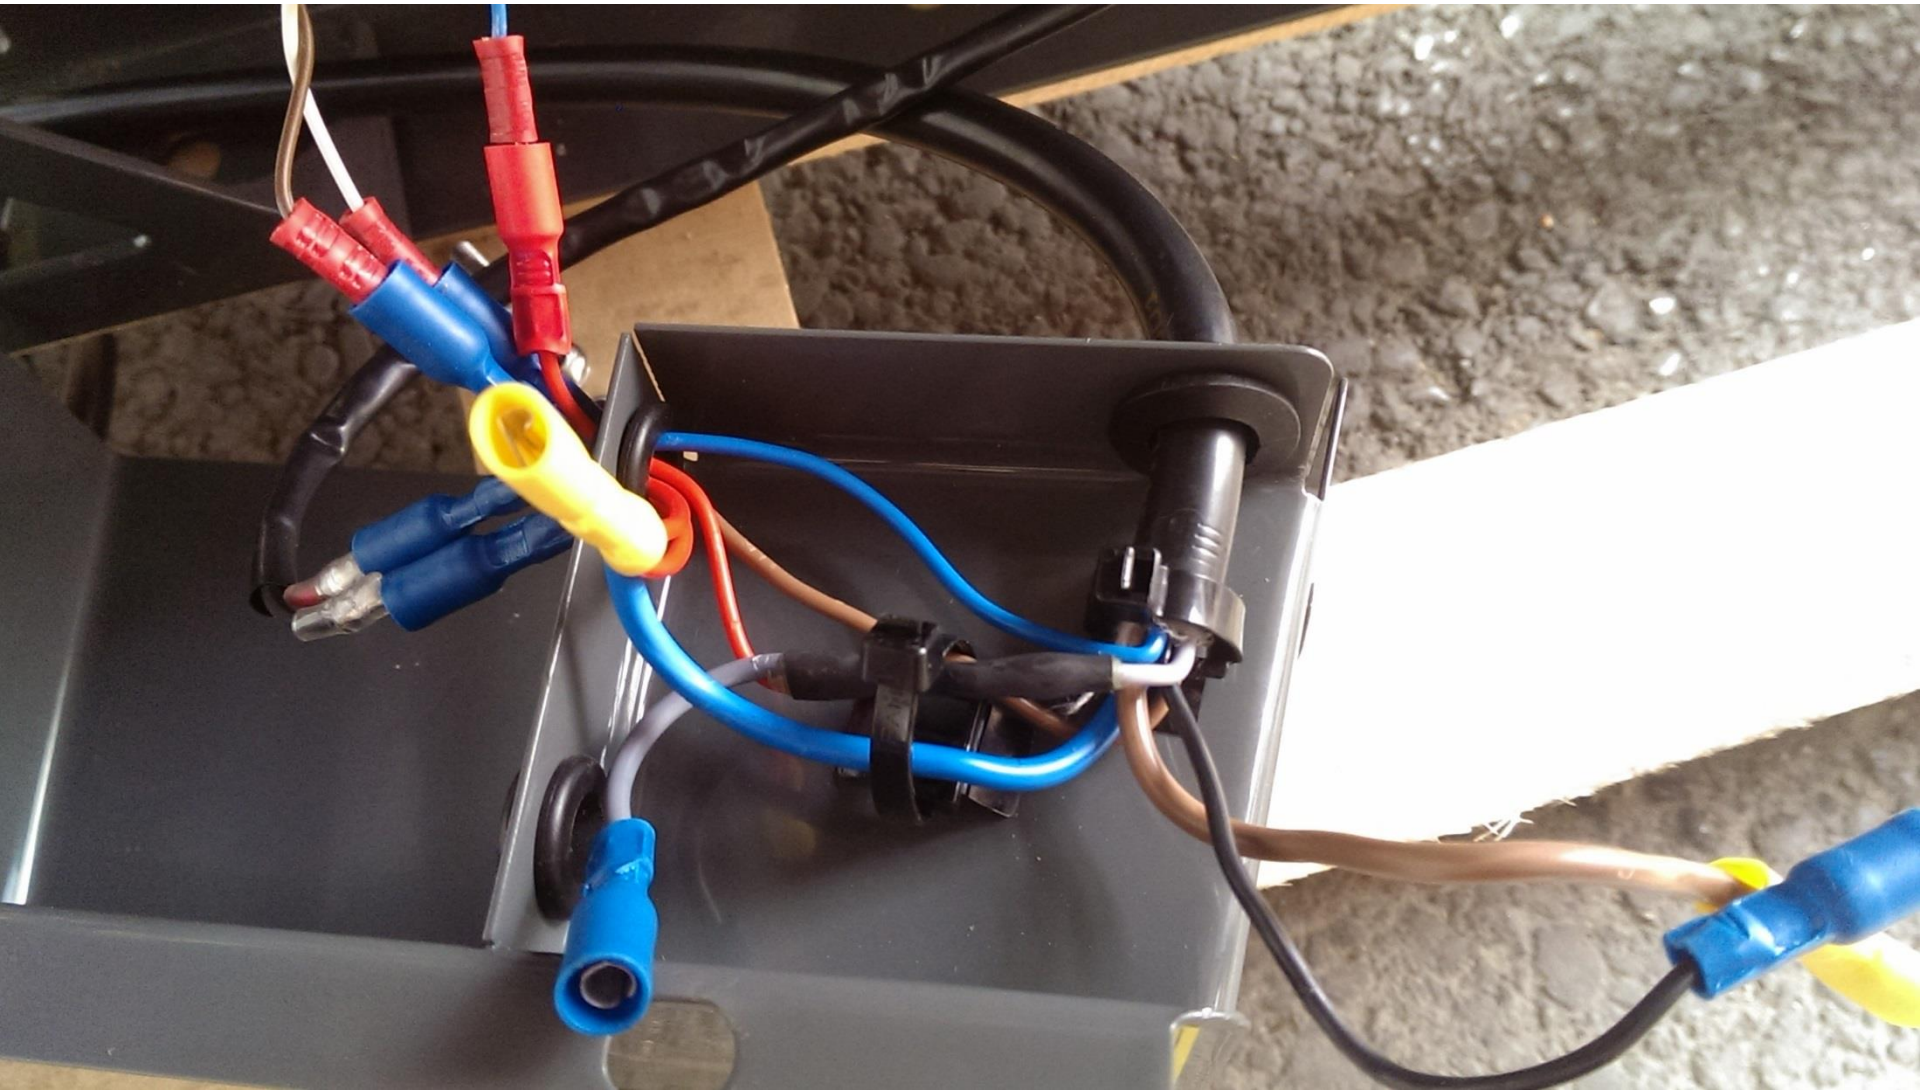

DS 200

DS 500

